

Replaceable door seal – service seal (insertable)

For some time we have been fitting various models with **door seals** on which the **flexible part** of the foamed-in profile (magnetic strip and cushion) can be cut off and **replaced with a service seal** if necessary.

These seals take much less time to fit than the screwed solution.



At the moment (**as at July 2002**), these seals are being used on the following models:

All Swiss measuring system (SMS) appliances with a 7 in third place from Index 24 onwards
all KD... / KDN... 4642 from Index 24 onwards
all KSD... 4642 from Index 24 onwards
all KGT... 5066 from Index 25 onwards
all KGN... 5066 from Index 24 onwards
all UGK 41 . 0 from Index 10A onwards
all UGK 57 . 0 from Index 10C onwards
all UGK 64 . 0 from Index 10A onwards
all FKS 1800 from Index 10D onwards
all FKS 2600 from Index 10C onwards
all FKS 3600 from Index 10E onwards
all FKS 5000 from Index 10E onwards
all UKS 1800 from Index 11A onwards
all UKS 2600 from Index 11B onwards
all UKS 3500 from Index 10D onwards
all UKS 3600 from Index 11C onwards
all UKS 3650 from Index 11B onwards
all UKS 5000 from Index 11C onwards
all UKS 5050 from Index 11B onwards
WKS _w 1800 from Index 10K onwards / version 531
all WKS _w 3200 from Index 10K onwards
all WKS 3250 from Index 10E onwards
all WTS _w 3200 from Index 10H onwards
all WKS 4750 from Index 10D onwards
all WKS _b 5700 from Index 12D onwards
all WKS _r 5700 from Index 12C onwards

Our **spare parts documentation** (ET-View), which is updated on an ongoing basis, tells you which models have a replaceable seal. When a seal needs to be replaced on one of these models, the service seal needed will be designated "**Replaceable magnetic door seal**". This will enable information on the appropriate measure (replacing the seal, replacing the door) to be found promptly.

Every service seal will be accompanied by **Installation instructions 7080 419** (see enclosure) which describes the individual steps.


Schnittdarstellung
Cross section
Aanzicht op doorsnede
Vue en coupe
Vista in sezione
Representación en sección
Representação em corte

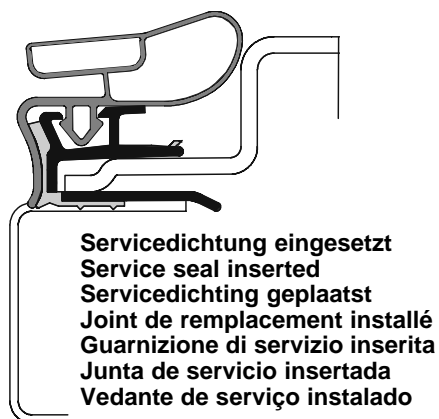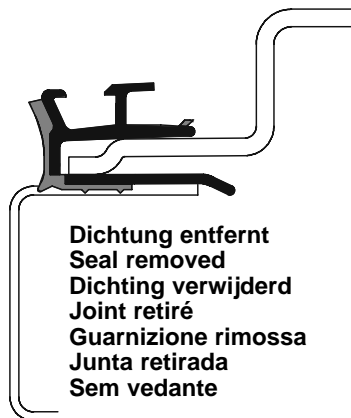


Montageanleitung - Servicedichtung
Assembly instructions – service seal
Handleiding voor de montage – servicedichting
Instructions de montage du joint de remplacement
Istruzioni di montaggio guarnizione di servizio
Instrucciones para el montaje – Junta de servicio
Instruções de montagem – Vedante de serviço



Dichtung außen und innen einschneiden.
Cut seal outside and inside.
Dichting buiten en binnen insnijden.
Inciser le joint à l'intérieur et à l'extérieur.
Incidere la guarnizione all'esterno e all'interno.
Practicar una incisión en la junta por fuera y por dentro.
Corte o vedante no exterior e no interior.

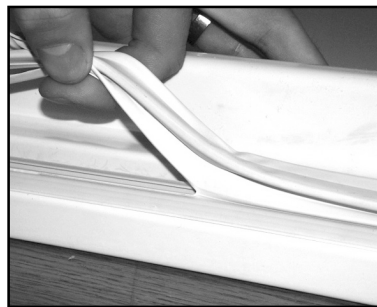

Dichtung abziehen. Abrisskanten sauber nachschneiden.
Remove seal. Neaten cutting edge.
Dichting wegtrekken. Scheurranden gaaf nasnijden.
Détacher le joint. Découper proprement les angles de rupture.
Togliere la guarnizione. Rificare i bordi di distacco.
Extraer la junta. Repasar limpiando los bordes de rotura.
Retire o vedante; lime as arestas de desmontagem.

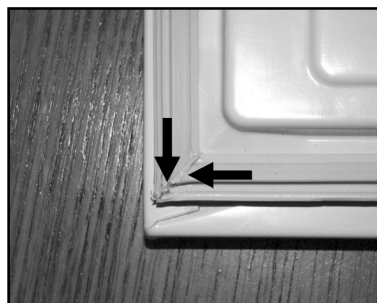

Profil im Eckbereich entgraten. Serviceichtung einsetzen.
Trim profile around corners. Insert service seal.
Profiel op de hoeken afbramen. Serviceichting plaatsen.
Supprimer les bavures du profilé dans le coin. Appliquer le joint de remplacement.
Sbavare il profilo nell'angolo. Inserire la guarnizione di servizio.
Desbarbar el perfil en la zona de la esquina. Insertar la junta de servicio.
Rebarbe o perfil na zona do canto; instale o vedante de serviço.